HOME
DECORATORS
COLLECTION

BF-25074 LAUNDRY CART

INV#13645

ASSEMBLY INSTRUCTIONS

Made In China

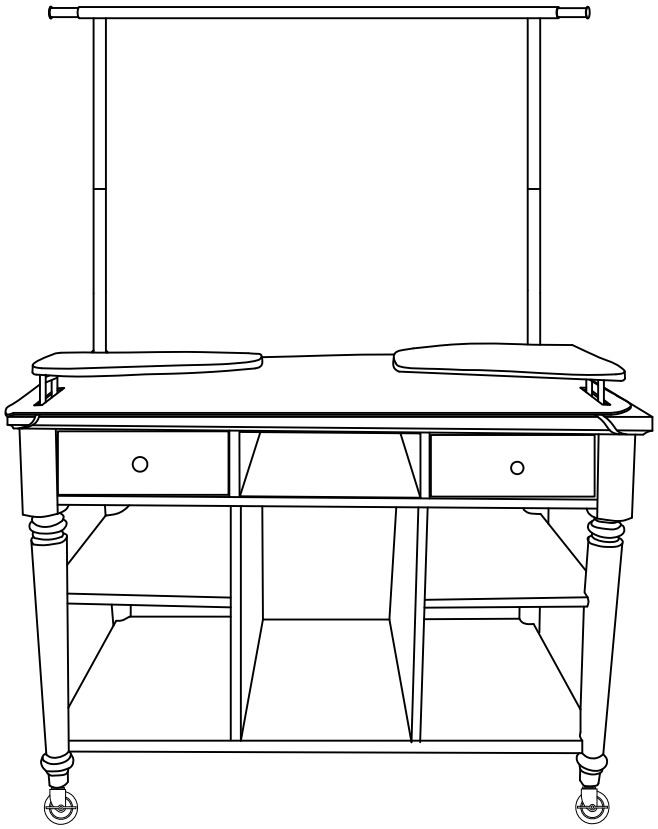

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP FRAME-1PC	B  BOTTOM PANEL-1PC	C  STAND PANELS-2PCS
D  ACROSS PANELS-2PCS	E  LEFT FRONT FOOT-1PC	F LEFT BACK FOOT-1PC
G  SLEEVE BOARD-1PC	H 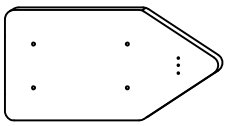 DEMI BOARD-1PC	I 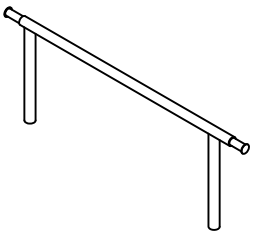 HANGING ROD-1PC
J BRACKETS-2PCS	K 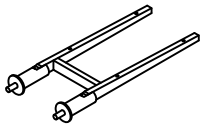 IRONING BOARD HINGES-2PCS	L CASTERS-4PCS

M  IRONING PAD-1PC	N 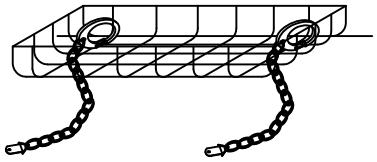 WIRE SHELVES-2PCS	O 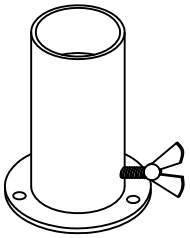 CUPS-2PCS
P 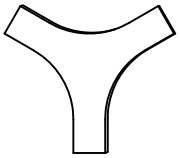 CAM-TOOL-1PC	Q 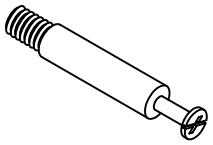 CAM-BOLTS-4PCS	R  CAM-LOCKS-4PCS
S 8mm× 1-3/4" 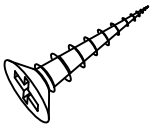 SCREWS-8PCS	T 6mm× 1/2"  SCREWS-16PCS	U 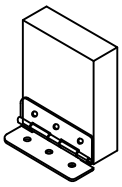 SUPPORTERS-2PCS
V ALLEN WRENCH-1PC	W 11mm× 1-1/4"  BOLTS-8PCS	X  NUTS-4PCS
Y 8mm× 1-1/4" 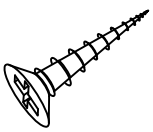 SCREWS-4PCS	Z 13mm× 2"  BOLTS-8PCS	A1 ALLEN WRENCH-1PC

B1 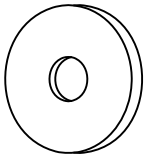 WASHERS-8PCS	C1 8mm× 3/4" 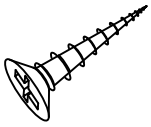 SCREWS-4PCS	E1 RIGHT FRONT FOOT-1PC
F1 RIGHT BACK FOOT-1PC		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

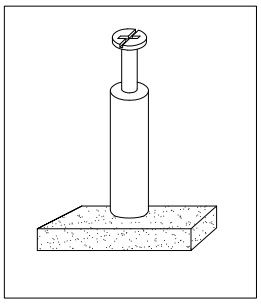

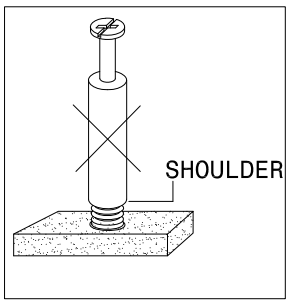

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

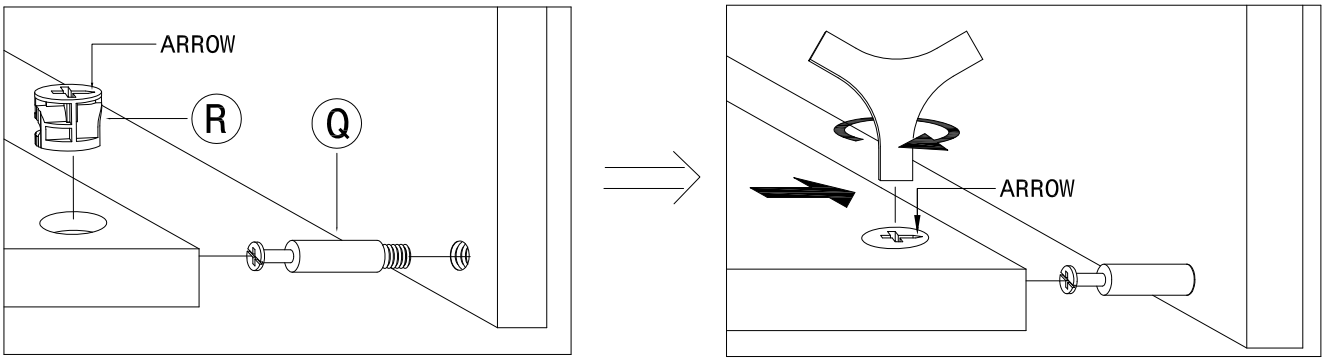

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

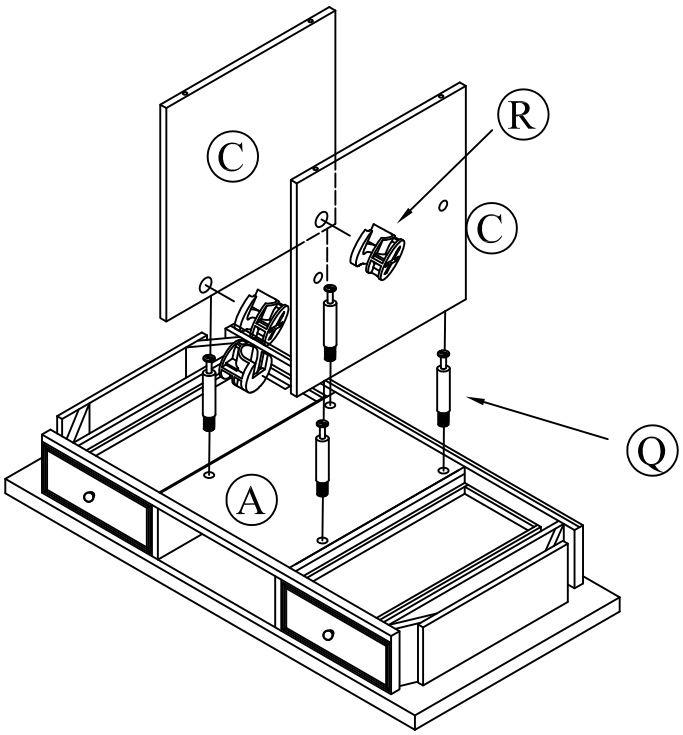

1). ASSEMBLE THE STAND PANELS(C).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE STAND PANELS(C) AND ATTACH USING 4 CAM-LOCKS(R).

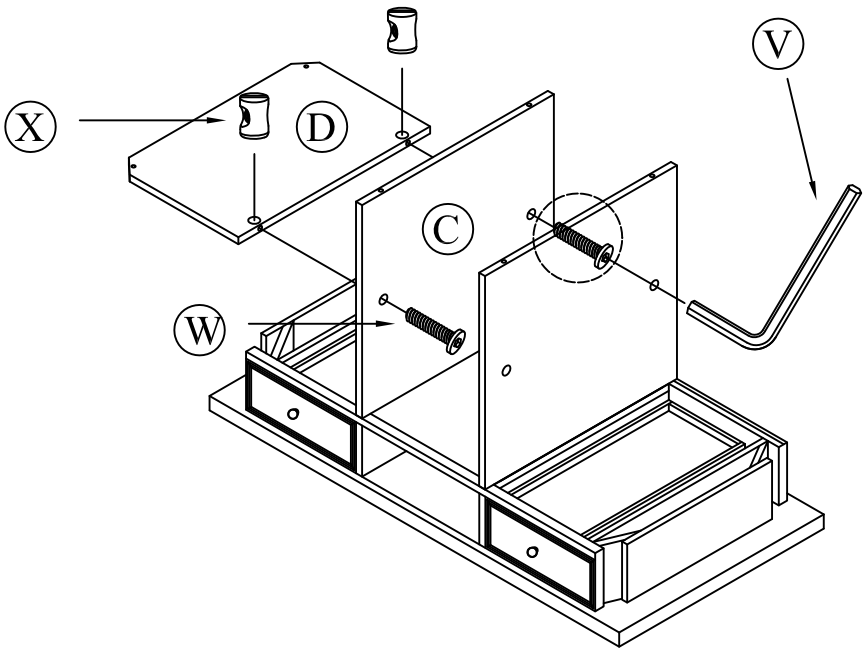

2). ASSEMBLE THE RIGHT ACROSS PANEL(D).

- INSERT 2 NUTS(X) INTO HOLES IN THE ACROSS PANEL(D).
- ATTACH THE ACROSS PANEL(D) TO STAND PANEL(C) USING 2 BOLTS(W).

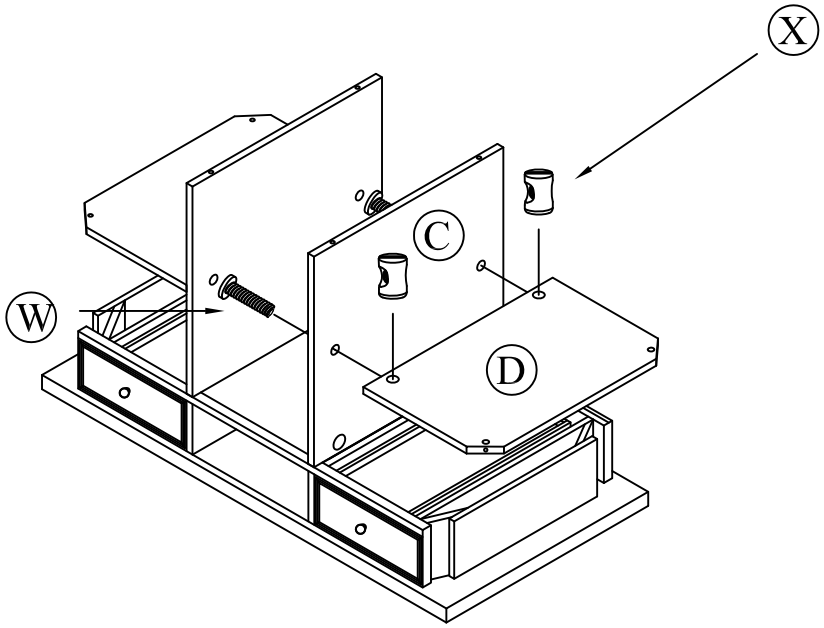

3). ASSEMBLE THE ACROSS PANEL(D).

- INSERT 2 NUTS(X) INTO HOLES IN THE ACROSS PANEL(D).
- ATTACH THE ACROSS PANEL(D) TO STAND PANEL(C) USING 2 BOLTS(W).

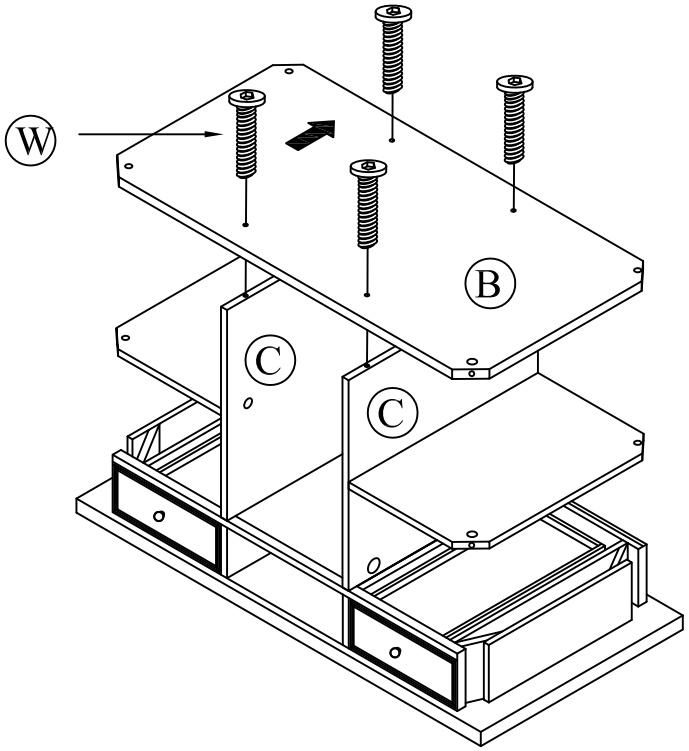

4). ASSEMBLE THE BOTTOM PANEL(B).

- ATTACH THE BOTTOM PANEL(B) TO STAND PANELS(C) USING 4 BOLTS(W).

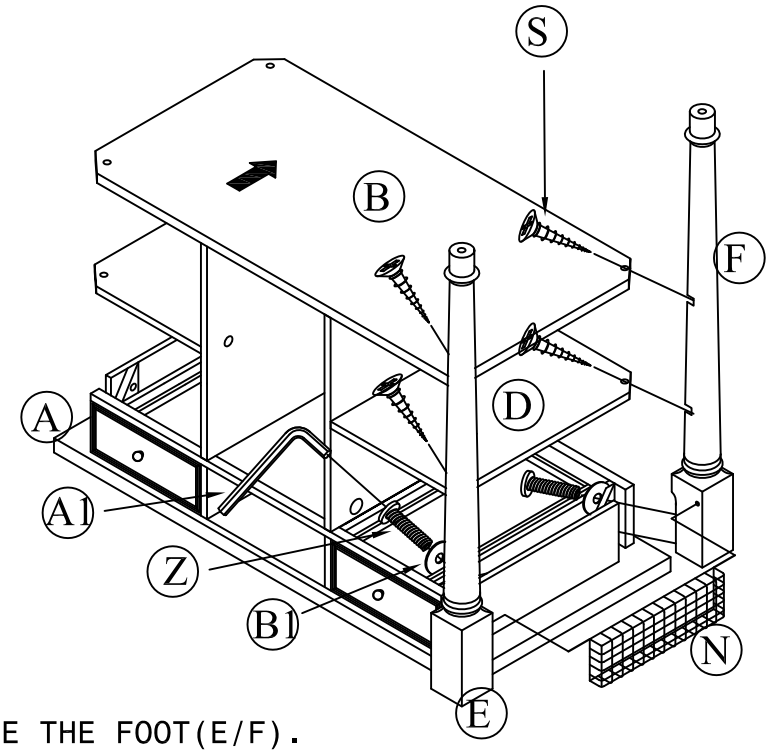

5). ASSEMBLE THE FOOT(E/F).

- INSERT THE WIRE SHELF(N) INTO THE HOLES IN THE FOOT(E/F).
- ATTACH THE FOOT(E/F) TO TOP FRAME(A) USING 4 BOLTS(Z) AND 4 WASHERS(B1).
- ROTATE 4 SCREWS(S) INTO THE HOLES IN THE PANEL(B/D).

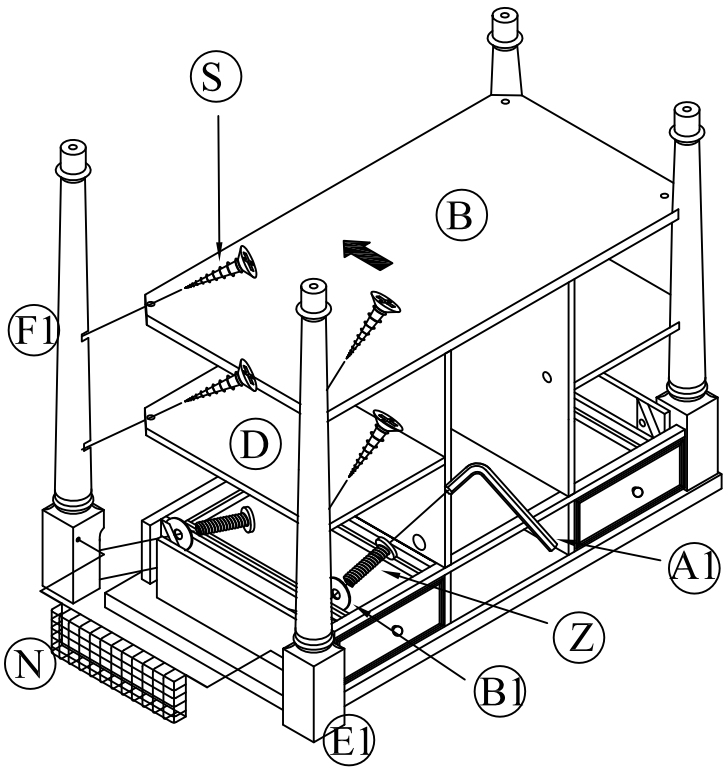

6). ASSEMBLE THE FOOT(E1/F1).

- INSERT THE WIRE SHELF(N) INTO THE HOLES IN THE FOOT(E1/F1).
- ATTACH THE FOOT(E1/F1) TO TOP FRAME(A) USING 4 BOLTS(Z) AND 4 WASHERS(B1).
- ROTATE 4 SCREWS(S) INTO THE HOLES IN THE PANEL(B/D).

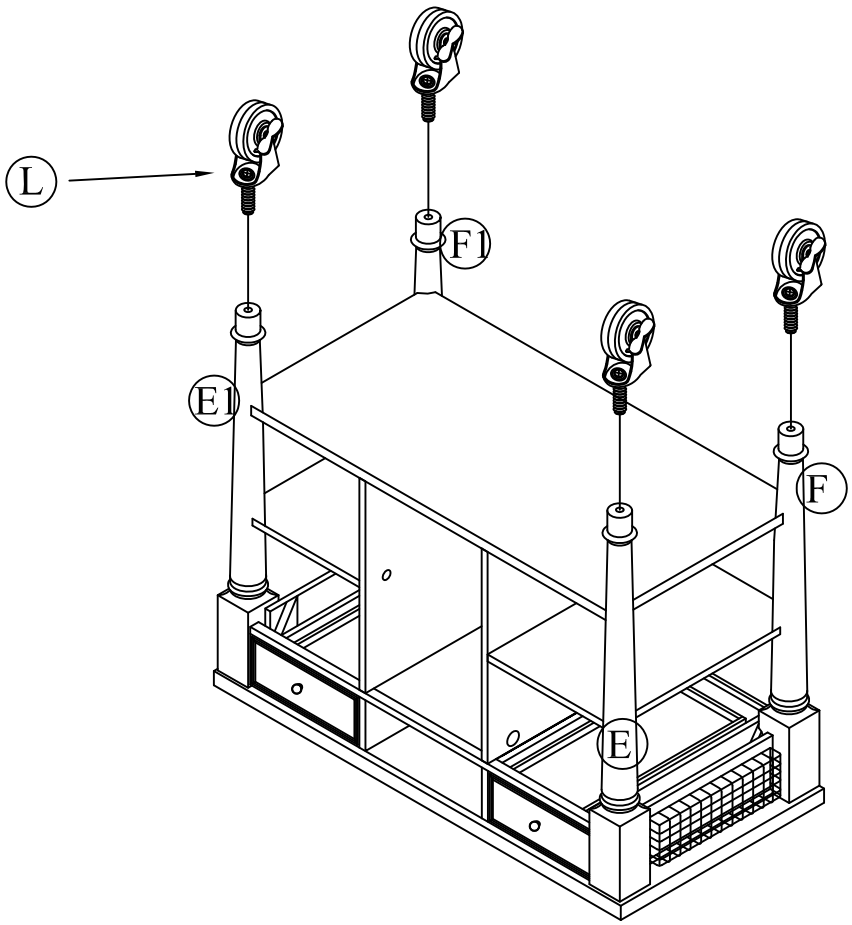

7). ASSEMBLE THE CASTERS(L).

- ROTATE 4 CASTERS(L) INTO THE HOLES IN THE FOOT(E/F/E1/F1).

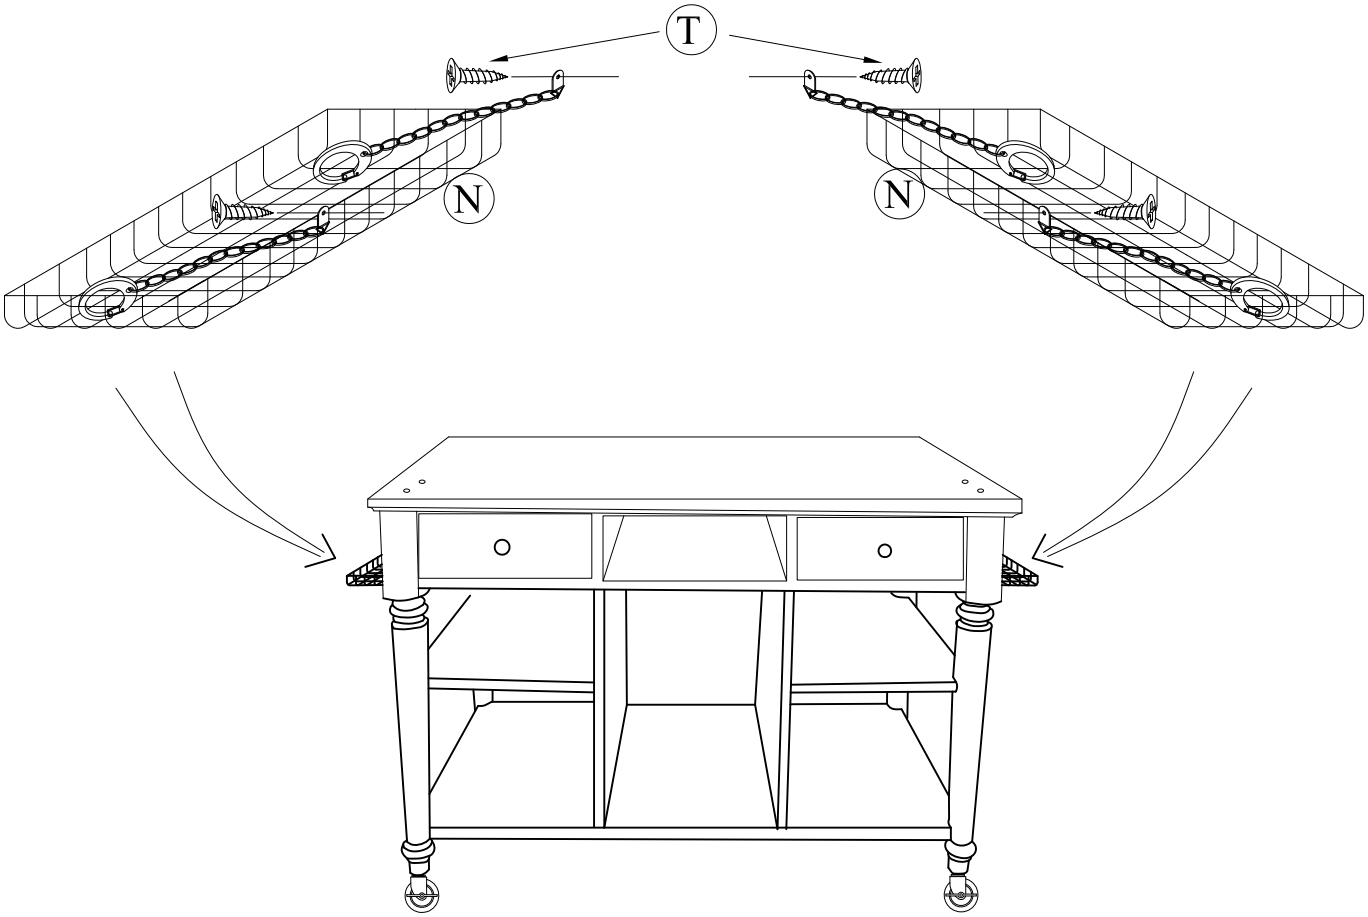

8). ASSEMBLE THE WIRE SHELFS(N).

- ATTACH THE WIRE SHELF(N) TO TOP PANEL(A) USING 4 SCREWS(T).

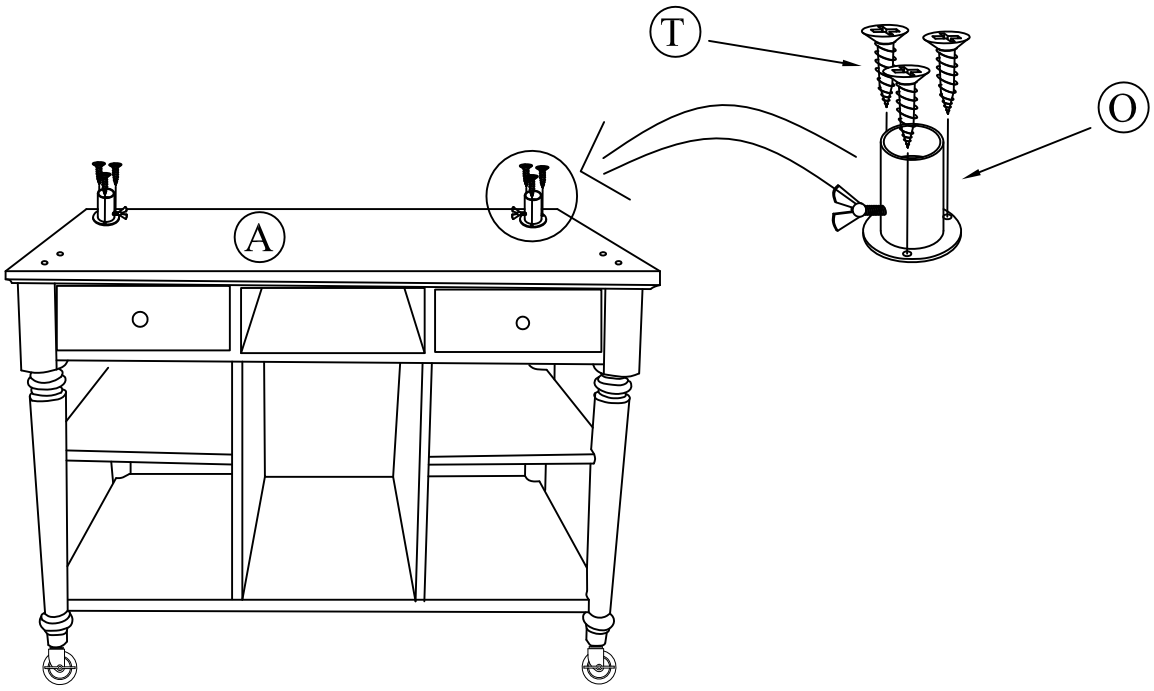

9). ASSEMBLE THE CUPS(O).

- ATTACH THE CUPS(O) TO TOP FRAME(A) USING 6 SCREWS(T).

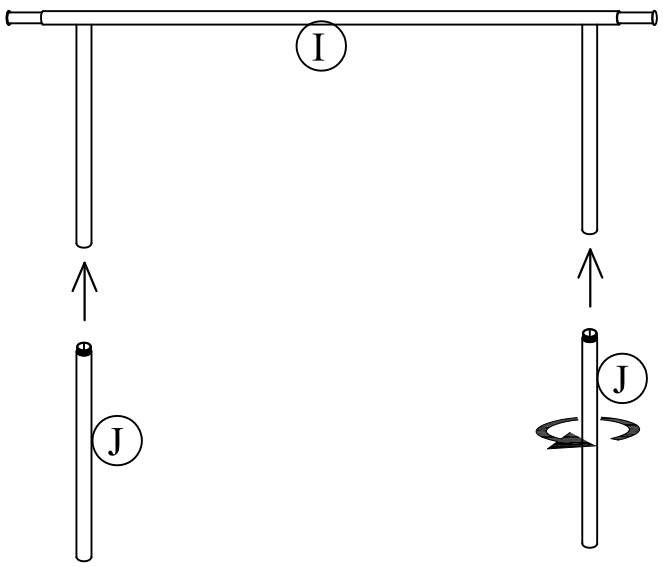

10). ASSEMBLE THE HANGING ROD(I).

- ROTATE THE BRACKETS(J) INTO THE HOLES IN THE HANGING ROD(I).

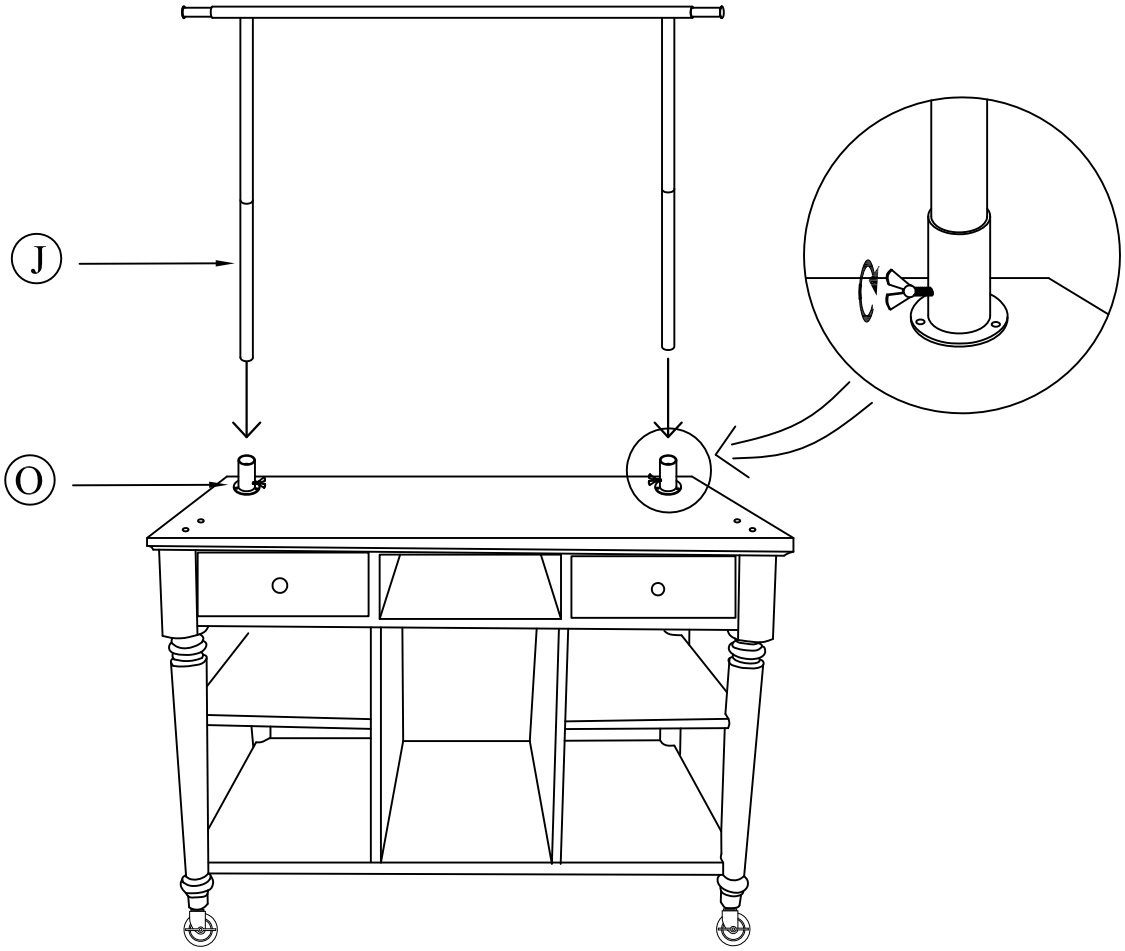

11). ASSEMBLE THE BRACKETS(J).

- INSERT THE BRACKETS(J) INTO THE HOLES IN THE CUPS(O).

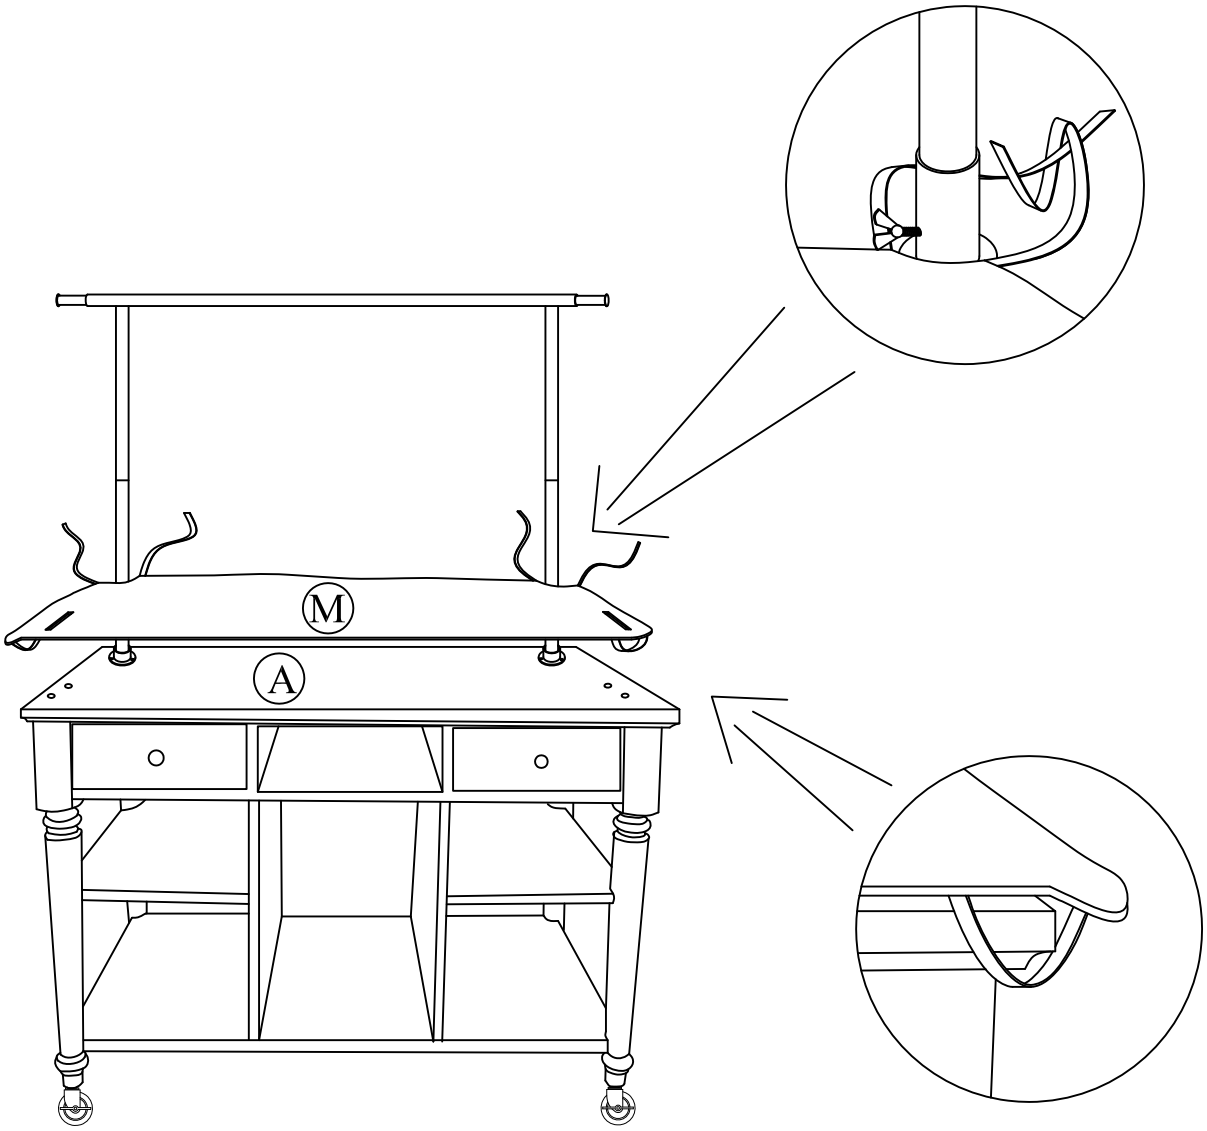

12). ASSEMBLE THE IRONING PAD(M).

- SECURE THE IRONING PAD(M) TO THE TOP FRAME(A).

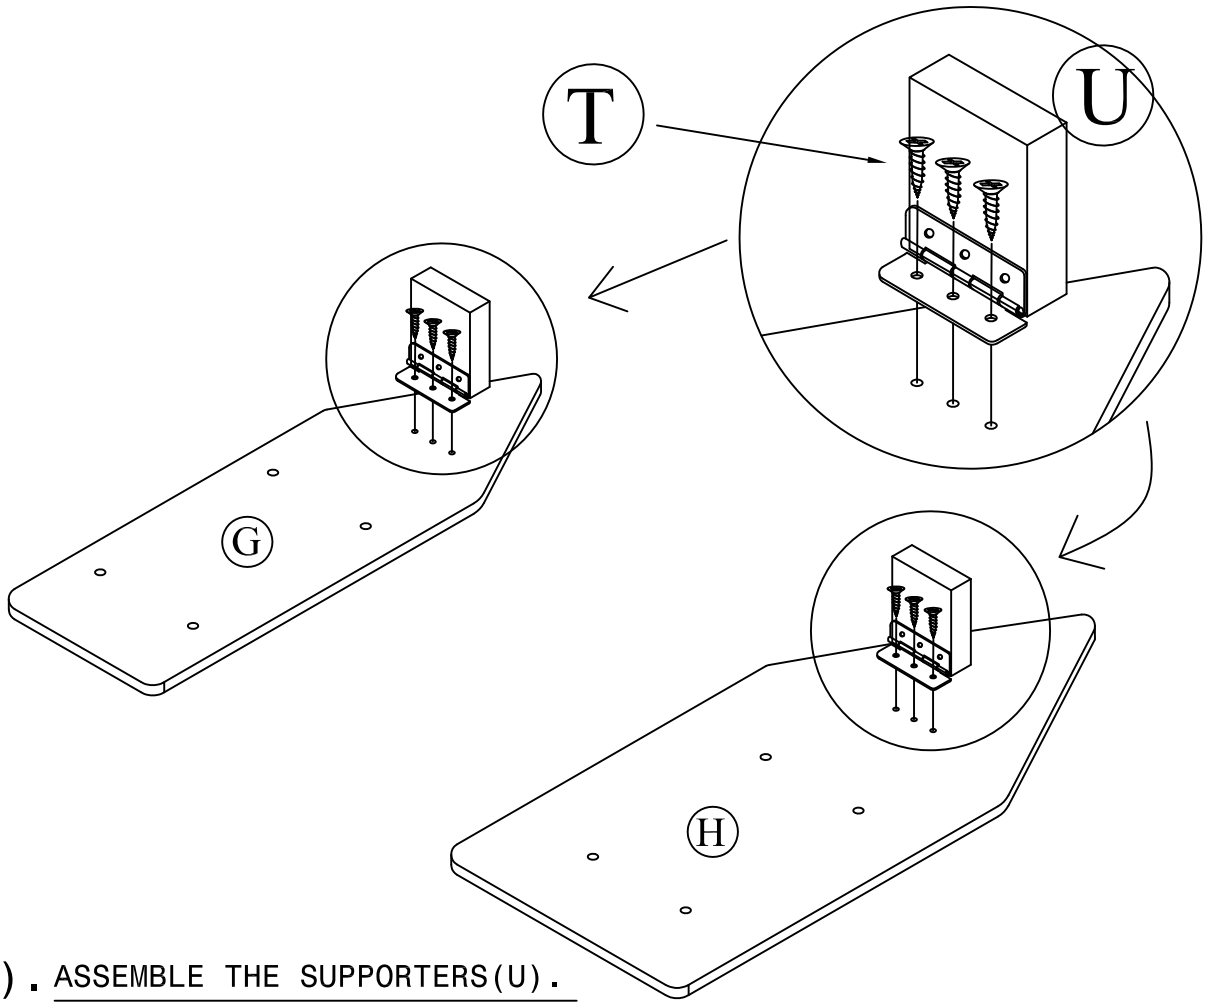

13). ASSEMBLE THE SUPPORTERS(U).

- ATTACH THE SUPPORTERS(U) TO PANEL(G/H) USING 6 SCREWS(T).

NOTE: THE SUPPORTER(U) IS AN OPTIONAL PART. IT'S RECOMMENDED TO INSTALL IT WHEN APPLYING HEAVY WEIGHT ON THE IRONING BOARD.

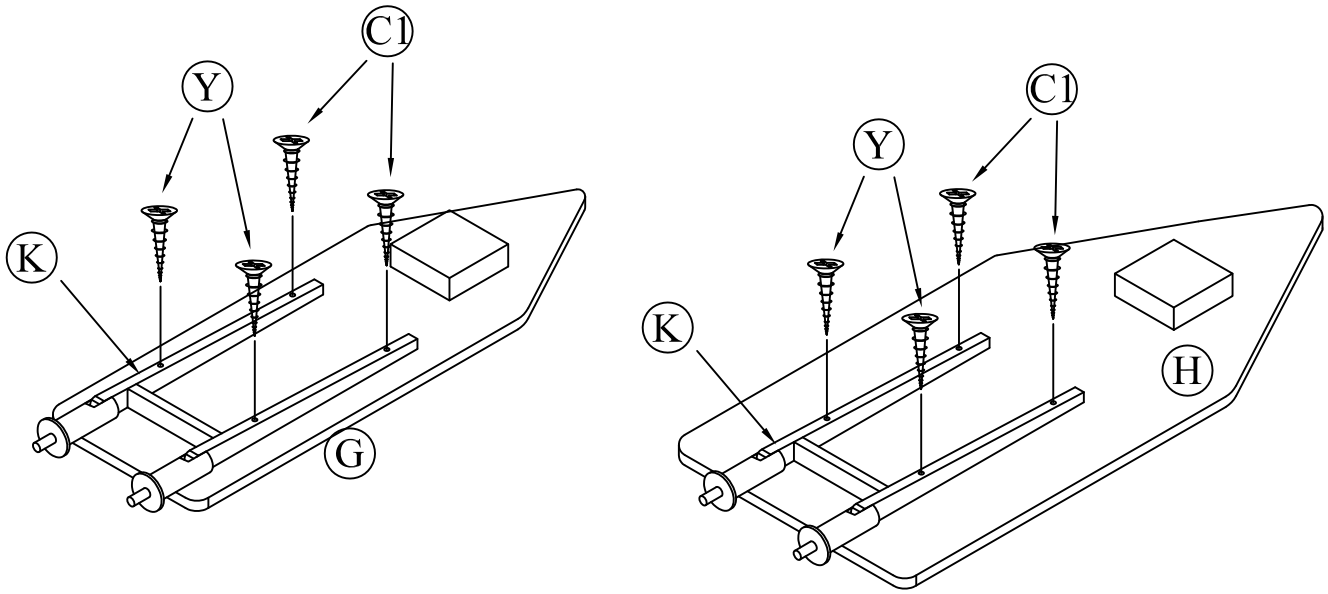

14). ASSEMBLE THE IRONING BOARD HINGES(K).

- ATTACH THE IRONING BOARD HINGES(K) TO PANEL(G/H) USING 4 SCREWS(Y) AND 4 SCREWS(C1).

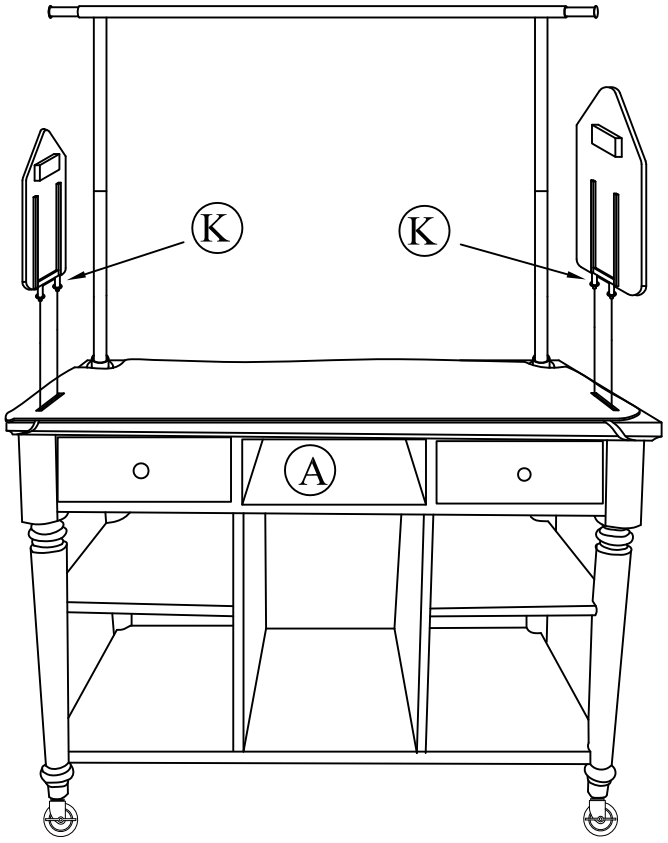

15). ASSEMBLE THE IRONING BOARD HINGES(K).

- INSERT THE IRONING BOARD HINGES(K) INTO THE HOLES IN THE TOP FRAME(A).